


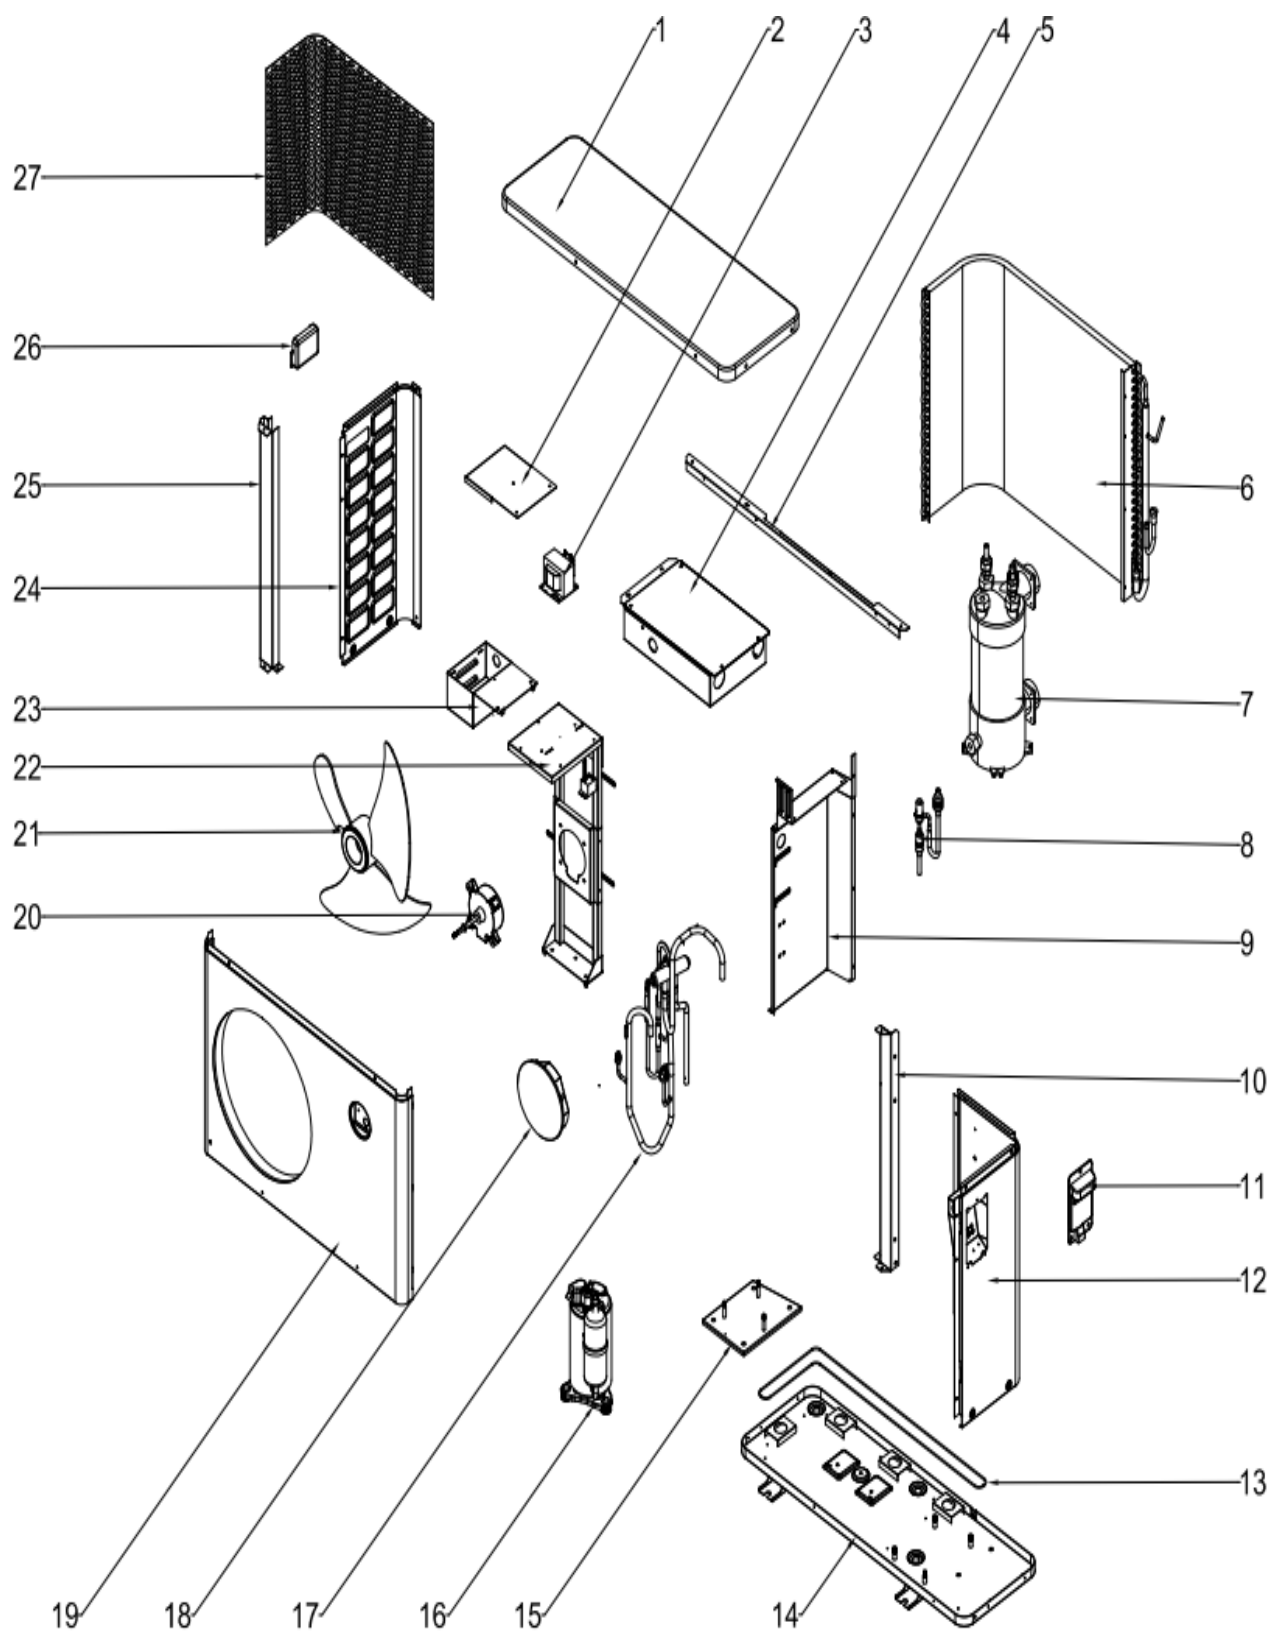

Position	Spare parts	Code
1	Top Cover	112-46-15-00840
2	Reactance Cover	112-46-10-03437
3	Reactance	101-10001-786
4	Electrical Box	112-04-10-01294
5	Crossbeam	112-46-10-03432
6	Finned Heat Exchanger	110-05-12-01009
7	Titanium Tube Heat Exchanger	110-05-13-00169
8	Throttle Device Assembly	100-10002-205
		100-10032-407
9	Middle Partition	112-03-10-00647
10	Right Column	112-46-10-03431
11	Right Handle	107-10002-009
12	Right Plate	112-46-14-00686
13	Chassis Electric Heater Belt	113-02-17-00112
14	Chassis	112-00-10-01072
15	Compressor Tray	112-46-10-03435
16	Compressor	110-00-10-00173
17	Four-Way Valve Assembly	110-09-20-00084
		110-09-26-00028
18	Wire Controller	305-00030
19	Front Plate	112-46-11-01158
20	Fan Motor	110-03-10-00197
21	Fan Blade	110-01-10-00168
22	Motor Support	112-10-10-00400
23	Reactance Fixing Plate	112-46-10-03436
24	Left Plate	112-46-13-00613
25	Left Column	112-46-10-03430
26	Left Handle	107-10002-006
27	Protective Grille	107-10002-005